




Analytical[®]
Technologies Limited

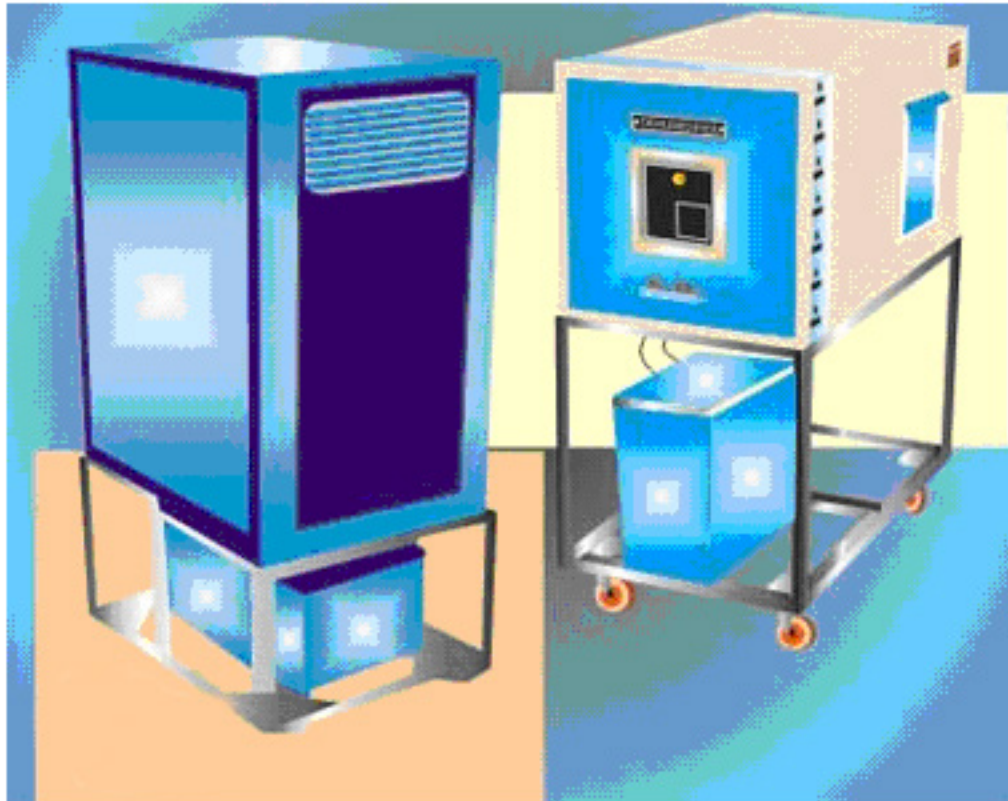

DE-HUMIDIFIER

Products | Applications | Software | Accessories | Consumables | Services

Analytical Technologies Limited
www.analyticalgroup.net

PRODUCT SPECIFICATION

(fitted With Time Controlled Safety Device, In Case Humidity Controller Fails, For Safety Of The Compressor) Dehumidifiers are water condensing type. Base on "Refrigeration Cycle" to avoid use of dessicant type models. The unit is self standing and is mounted on a study angle iron frame. Fitted with caster wheels. Dehumidifier excess moisture from the atmosphere and it fitted with hermetically sealed compressor. Heat exchanger and water condensing coils are made of Steel collection tank is provided below the unit to collect condensate water, Humidity is controlled by automatic HUMIDISTAT incorporated in the unit upto 30% ± 3% RH, depending upon the ambient conditions. To achieve very low humidity. The room should have a independent window type Air Conditioner to match with the dehumidifier heat load in the room. Suitable to work on 220/230 Volts A.C Supply. Capacity : 1.5 Tone

Optional Accessories

Digital Humidity controller cum indicator
Automatic Voltage Stabilizer 4.0 KVA
(TRIPLE RELAY)



Analytical®
Technologies Limited

Analytical Group Companies
Analytical Technologies Limited
Analytical Bio-Technologies
Analytical Bio- Med
HPLC Solutions

Branch Office / Distributor

Corporate & Regd. Office :

Analytical House, # E67 & E68. Ravi Park, Opp., Sainath Park, Vasna Road, Baroda, Gujarat - 390 015. INDIA
Tele : 0265-2253620 / 2252839 Fax : 0265-2254395 E-mail : info@hplctechnologies.com / info@ais-india.com
Web : www.ais-india.com / www.analyticalgroup.net